REPORT NUMBER 103-GTL-07-004

### SAFETY COMPLIANCE TESTING FOR FMVSS NO. 103 WINDSHIELD DEFROSTING AND DEFOGGING SYSTEMS

NISSAN MOTOR CO., LTD. 2007 NISSAN VERSA, PASSENGER CAR NHTSA NO. C75201

GENERAL TESTING LABORATORIES, INC. 1623 LEEDSTOWN ROAD COLONIAL BEACH, VIRGINIA 22443



MARCH 3, 2008

FINAL REPORT

PREPARED FOR

U. S. DEPARTMENT OF TRANSPORTATION NATIONAL HIGHWAY TRAFFIC SAFETY ADMINISTRATION ENFORCEMENT OFFICE OF VEHICLE SAFETY COMPLIANCE 1200 NEW JERSEY AVE. S.E. WASHINGTON, D.C. 20590 This publication is distributed by the U.S. Department of Transportation, National Highway Traffic Safety Administration, in the interest of information exchange. The opinions, findings and conclusions expressed in this publication are those of the author(s) and not necessarily those of the Department of Transportation or the National Highway Traffic Safety Administration. The United States Government assumes no liability for its contents or use thereof. If trade or manufacturers' names or products are mentioned, it is only because they are considered essential to the object of the publication and should not be construed as an endorsement. The United States Government does not endorse products or manufacturers.

Prepared By: Approved By: Approval Date: FINAL REPORT ACCEPTANCE BY OVSC:

Accepted By: 08 Acceptance Date: 3

**Technical Report Documentation Page** 

			lechr	nical Report Documentation Page
1. Report No.	2. Government	Accessic	on No.	3. Recipient's Catalog No.
103-GTL-07-004	N//	4		N/A
4. Title and Subtitle				5. Report Date
Final Report of FMV	SS 103 Complia	nce Testi	ng of	March 3, 2008
2007 NISSAN VERS	SA, PASSENGEF	R CAR		6. Performing Organ. Code
NHTSA No. C75201				GTL
7. Author(s)				8. Performing Organ. Rep#
Grant Farrand, Proje	5			GTL-DOT-07-103-004
Debbie Messick, Pro				
9. Performing Organ		d Addres	S	10. Work Unit No. (TRAIS)
General Testing L				N/A
1623 Leedstown				11. Contract or Grant No.
Colonial Beach, V				DTNH22-06-C-00032
12. Sponsoring Age		ddress		13. Type of Report and Period
U.S. Department of				Covered
National Highway Tr	affic Safety Adm	inistration	ו	Final Test Report
Enforcement		/ / <b>.</b>		October 23-24, 2007
Office of Vehicle Sat		(NVS-220	D)	14. Sponsoring Agency Code
1200 New Jersey Av				NVS-220
Washington, DC 20	590			
45. Our also a starry 1				
15. Supplementary I	NOTES			
16. Abstract				
	ere conducted on	the subi	ect 2007 Niss	an Versa Passenger Car in
		•		afety Compliance Test
Procedure No. TP-1				
Test failures identifie				
17. Key Words			18. Distributio	on Statement
Compliance Testing				s report are available from
Safety Engineering			NHTSA	·
FMVŚS 103				ormation Services (TIS)
			NPO-411	
			1200 New Je	rsey Ave., S.E.
			Washington,	5
			Email: tis@do	
			Fax: 202-493	-2833
19. Security Classif.	(of this report)	21. No.	of Pages	22. Price
UNCLÁSSIFIED	,		33	
20. Security Classif.	(of this page)			
UNCLASSIFIED				
Form DOT F 1700.7	(8-72)			

Form DOT F 1700.7 (8-72)

TABLE OF CONTENTS

i

SECTION		PA
1	Purpose of Compliance Test	1
2	Compliance Test Procedure and Results Summary	2
3	Compliance Test Data	4
4	Test Equipment List	8
5	Photographs	9
	<ul> <li>5.1 Left Side View of Vehicle</li> <li>5.2 Right Side View of Vehicle</li> <li>5.3 <sup>3</sup>/<sub>4</sub> Frontal View From Left Side of Vehicle</li> <li>5.4 <sup>3</sup>/<sub>4</sub> Rear View From Right Side of Vehicle</li> <li>5.5 Vehicle Certification Label</li> <li>5.6 Vehicle Tire Information Label</li> <li>5.7 Close-up View of Defroster Control Setting on Dash</li> <li>5.8 Instrumentation Set-up</li> <li>5.9 Windshield, Pre-Test Frosted State Test #1</li> <li>5.10 Defrosted Area at 20 minutes Test #1</li> <li>5.12 Windshield Vellum Pattern, Post Test #1</li> <li>5.13 Windshield Pre-Test Frosted State Test #2</li> <li>5.14 Defrosted Area at 20 minutes Test #2</li> <li>5.15 Defrosted Area at 25 minutes Test #2</li> <li>5.16 Windshield Vellum Pattern, Post Test #2</li> </ul>	
6	Copy of Owner's Manual Defroster Instructions	26

26

### SECTION 1

### PURPOSE OF COMPLIANCE TEST

### 1.0 PURPOSE OF COMPLIANCE TEST

A 2007 Nissan Versa Passenger Car was subjected to Federal Motor Vehicle Safety Standard (FMVSS) No. 103 testing to determine if the vehicle was in compliance with the requirements of the standard. All tests were conducted in accordance with NHTSA, Office of Vehicle Safety Compliance (OVSC) Laboratory Procedure, TP-103-13 dated 26 June 1996 and General Testing Laboratories, Inc. (GTL) Test Procedure, "Windshield Defrosting and Defogging Systems – Passenger Vehicles, Mulitpurpose Vehicles, Trucks and Buses".

### 1.1 <u>TEST VEHICLE</u>

The test vehicle was a 2007 Nissan Versa Passenger Car. Nomenclature applicable to the test vehicle are:

- A. Vehicle Identification Number: 3N1BC11E57L394885
- B. <u>NHTSA No.</u>: C75201
- C. Manufacturer: NISSAN MOTOR CO., LTD.
- D. Manufacture Date: 12/06

### 1.2 TEST DATE

The test vehicle was subjected to FMVSS No. 103 testing on October 23-24, 2007.

### **SECTION 2**

### COMPLIANCE TEST PROCEDURE AND SUMMARY OF RESULTS

### 2.0 GENERAL

The 2007 Nissan Versa 4-door passenger car, NHTSA No. C75201 was subjected to FMVSS No. 103 tests on October 23-24, 2007. Photographs of the test vehicle are shown in Figures 5.1 through 5.4. The manufacturer's certification and tire information labels are shown in Figures 5.5 and 5.6. The test instrumentation and instrument panel setups are depicted in Figures 5.7 and 5.8. Figures 5.9 through 5.15 depict the windshield pre and post test defrost conditions.

### 2.1 TEST PROCEDURE

Prior to test the test vehicle was inspected for completeness, systems operability, and appropriate fuel and liquid levels, i.e., oil and coolant to include antifreeze protection. The vehicle was then photographically documented as required by the DOT/NHTSA test procedure. The windshield patterns for areas A, B, C, and D had been furnished prior to testing and these areas were outlined on the windshield with a marker. The vehicle was then installed in the cold chamber and pre-conditioned for a 14-hour minimum,  $0^{\circ} \pm 5^{\circ}$  F temperature soak for the first test run. After the pre-condition, the hood was raised to assure engine coolant and lubricant were stabilized within the test temperature range for a minimum of 2 hours.

At the end of the 2-hour minimum stabilization period, the entire windshield was sprayed evenly with 0.010 ounces of water per square inch of glass area. Refer to Section 3, Compliance Test Data, for test specifics such as total amount of water sprayed, spray gun identification, and air pressure regulation. The vehicle soak continued for an additional 30 minutes minimum but no more than 40 minutes after the windshield was sprayed.

At the conclusion of the additional soak time the vehicle's engine was started and operated at a target speed of 1500-1600 rpm or at the manufacturer's specification if different as noted on data sheets. The defroster blower was turned on to the high speed setting with the heater selector in the de-ice (defrost) position, and the temperature control in the maximum temperature position. All doors and windows were closed. The heater air intake was fully open and the vehicle's hood closed. At no time during the test were the windshield wipers used.

### **SECTION 2 continued**

At start of testing and during test, at each 5-minute interval after engine start, cold chamber, engine coolant, heater coolant in and defroster air left/defroster air right temperatures were recorded. Likewise at each 5-minute interval the boundary of the defrosted area was marked on the inside surface of the windshield. The test was run for a maximum of 40 minutes from engine start, or until such time as 100 percent windshield clearance was achieved. Photographs were made of the windshield at the pre-test frosted state and 20-minute and 25-minute intervals. Post test actions included placing a vellum pattern on the windshield and tracing the windshield's 5-minute interval defrosted area boundary lines onto the vellum pattern.

After the traces were obtained, the windshield was again thoroughly cleaned and the vehicle engine coolant and lubricant stabilization period at  $0^{\circ} \pm 5^{\circ}$  F temperature commenced for a repeat of the procedure discussed. The windshield patterns for both tests were used subsequently to determine the cleared area percentages.

### 2.2 SUMMARY OF RESULTS

Based on the test performed, the test vehicle appears to be in compliance with the requirements of FMVSS 103.

### SECTION 3

### COMPLIANCE TEST DATA

### 3.0 <u>TEST RESULTS</u>

The following data sheets document the results of testing on the 2007 Nissan Versa.

### SUMMARY DATA SHEET FMVSS 103, WINDSHIELD DEFROSTING AND DEFOGGING SYSTEMS

VEH. MOD YR/MAKE/MODEL/BODY: 2007 NISSAN VERSA PASSENGER CAR 
 VEH. NHTSA NO: C75201;
 VIN: 3N1BC11E57L394885

 VEH. BUILD DATE: 12/06
 TEST DATE: OCTOBER 23-24, 2007
 TEST LABORATORY: GENERAL TESTING LABORATORIES OBSERVERS: GRANT FARRAND, JIMMY LATANE

WINDSHIELD AREA: 1697 in<sup>2</sup> AREA C =245.0 in<sup>2</sup> AREA D =245.0 in<sup>2</sup> AREA A=1017.0 in<sup>2</sup>

MANUFACTURER'S WINDSHIELD PATTERN USED: Yes X No

ENGINE THERMOSTAT NOMINAL REGULATING TEMPERATURE: 180 °F

HEATER-DEFROSTER SYSTEM INCLUDES AIR CONDITIONER: YES X NO

DESCRIBE UNUSUAL FEATURES OF DEFROSTING SYSTEM: NONE

DESCRIBE UNUSUAL FEATURES OF TEST CAR: NONE

DESIGNATION			AREA PERCENT	DEFROST	ED	
	TEST 1	TEST 2	AVG	REQ'D	PASS	FAIL
CRITICAL AREA C AT 20 MINUTES	100%	100%	100%	80% MINIMUM	PASS	
PASSENGER AREA D AT 25 MINUTES	100%	100%	100%	80% MINIMUM	PASS	
TOTAL AREA A AT 40 MINUTES	100%	100%	100%	95% MINIMUM	PASS	

REMARKS:

RECORDED BY: <u>G. FARRAND</u>

DATE:	10/24/07

APPROVED BY: D. MESSICK

VEH. MOD YR/MAKE/MODEL/BODY: 2007 NISSAN VERSA PASSENGER CAR VEH. NHTSA NO: C75201; VIN: 3N1BC11E57L394885 VEH. BUILD DATE:12/06; TEST DATE: OCTOBER 23, 2007 TEST LABORATORY:GENERAL TESTING LABORATORIES OBSERVERS: GRANT FARRAND, JIMMY LATANE

If 1<sup>st</sup> Test Run, chamber conditioned <u>24</u> hours @ 0° ±5° F (14 hrs. min.)

Cold Soak Period: 24 HOURS

Time engine coolant and lubricant remained stabilized at 0° F: 15 hrs. 30 minutes

Water Spray Gun and Nozzle Type: BINKS #66 S

Spray Gun Pressure: 50 psi (50 psi  $\pm$  3 psi)

Water used: <u>17</u> fluid oz. (0.010 ounces per square inch of windshield area)

Soak Period Between Ice Application and Test Start: <u>35</u> minutes (30 to 40 minutes)

Engine Speed: 1500 rpm (Target engine speed 1500 to 1600 rpm)

Wind at specified location in front of windshield: <u>1</u> mph (0 to 2 mph)

Number of Vehicle Occupants: 1 (2 maximum)

Describe window openings, if any: NONE

TIME FROM START	MOTOR VOLTAGE		TEM	PERATURE, ºF			DEI	FROSTED ARE	A, %
(minutes)	(volts)	TEST ROOM	ENGINE WATER	HEATER WATER IN	DEFROS DRVR	STER AIR PSGR	A	С	D
0	13.5	-1.9	7	5	-1.1	5	0%	0%	0%
5	14.8	-1.7	27.8	64.7	54.5	59.4	0%	0%	0%
10	14.7	4	70.5	97.2	84.1	86.5	27.4%	21.3%	22.4%
15	14.7	0.0	95.0	102.1	99.7	101.8	74.1%	87.2%	91.2%
20	14.6	-1.1	106.3	107.7	107.3	107.3	99.7%	100%	100%
25	14.6	.5	116.8	115.6	115.7	117.3	100%	100%	100%

**REMARKS**:

RECORDED BY: <u>G. FARRAND</u>

DATE: 10/23/07

APPROVED BY: D. MESSICK

FMVSS 103 TEST DATA RECORD – TEST RUN NO. 2

VEH. MOD YR/MAKE/MODEL/BODY: 2007 NISSAN VERSA PASSENGER CAR VEH. NHTSA NO: C75201; VIN: 3N1BC11E57L394885 VEH. BUILD DATE:12/06 ; TEST DATE: OCTOBER 24, 2007 TEST LABORATORY:GENERAL TESTING LABORATORIES OBSERVERS: GRANT FARRAND, JIMMY LATANE

If 1<sup>st</sup> Test Run, chamber conditioned <u>24</u> hours @ 0° ±5° F (14 hrs. min.)

Cold Soak Period: 24.0 HOURS

Time engine coolant and lubricant remained stabilized at 0° F: 16 hrs. \_\_\_\_ minutes

Water Spray Gun and Nozzle Type: BINKS #66S

Spray Gun Pressure: 50 psi (50 psi ± 3 psi)

Water used: <u>17</u> fluid oz. (0.010 ounces per square inch of windshield area)

Soak Period Between Ice Application and Test Start: <u>35</u> minutes (30 to 40 minutes)

Engine Speed: 1500 rpm (Target engine speed 1500 to 1600 rpm)

Wind at specified location in front of windshield: <u>1</u> mph (0 to 2 mph)

Number of Vehicle Occupants: 1 (2 maximum)

Describe window openings, if any: \_\_\_\_\_ NONE

TIME FROM START	MOTOR VOLTAGE		TEMF	PERATURE, ºF			DEF	ROSTED ARE	<b>\</b> , %
(minutes)	(volts)	TEST ROOM	ENGINE WATER	HEATER WATER IN	DEFROS DRVR	TER AIR PSGR	А	С	D
0	13.5	0.0	-1.0	7	8	5	0%	0%	0%
5	14.8	-1.9	27.9	64.7	53.9	.0	0%	0%	0%
10	14.7	-1.0	70.3	91.8	83.0	85.4	30.8%	19.6%	21.8%
15	14.7	0.0	95.2	99.2	97.2	98.4	73.3%	84.1%	91.2%
20	14.6	0.0	107.1	114.0	105.7	107.8	99.5%	100%	100%
25	14.6	.5	117.1	111.5	114.4	116.3	100%	100%	100%

**REMARKS**:

RECORDED BY: <u>G. FARRAND</u>

DATE: 10/24/07

APPROVED BY: <u>D. MESSICK</u>

### SECTION 4 INSTRUMENTATION AND EQUIPMENT LIST

EQUIPMENT	DESCRIPTION	MODEL/	CAL. DATE	NEXT CAL.
		SERIAL NO.		DATE
TIMER	ACCU-SPLIT	ACT1	10/07	10/08
TAC/RECORDER	MONARCH	1444664	08/07	08/08
TEMPERATURE RECORDER	OMEGA	B/55662	06/07	06/08
SPRAY GUN	BINKS	66S	BEFORE USE	BEFORE USE
ANEMOMETER	OMEGA	53668	06/07	06/08
AIR PRESSURE GAGE	BINKS	0-160	10/07	10/08
SCALE	METTLER	H315/ 445951	BEFORE USE	BEFORE USE
GRADUATED BEAKER	PHOTAX	N/A	N/A	N/A
EVENT RECORDER	COMPUTER	GEO1	BEFORE USE	BEFORE USE

### TABLE 1 - INSTRUMENTATION & EQUIPMENT LIST

### **SECTION 5**

### PHOTOGRAPHS



FIGURE 5.1 LEFT SIDE VIEW OF VEHICLE



FIGURE 5.2 RIGHT SIDE VIEW OF VEHICLE



FIGURE 5.3 ¾ FRONTAL VIEW FROM LEFT SIDE OF VEHICLE



FIGURE 5.4 ¾ REAR VIEW FROM RIGHT SIDE VIEW OF VEHICLE

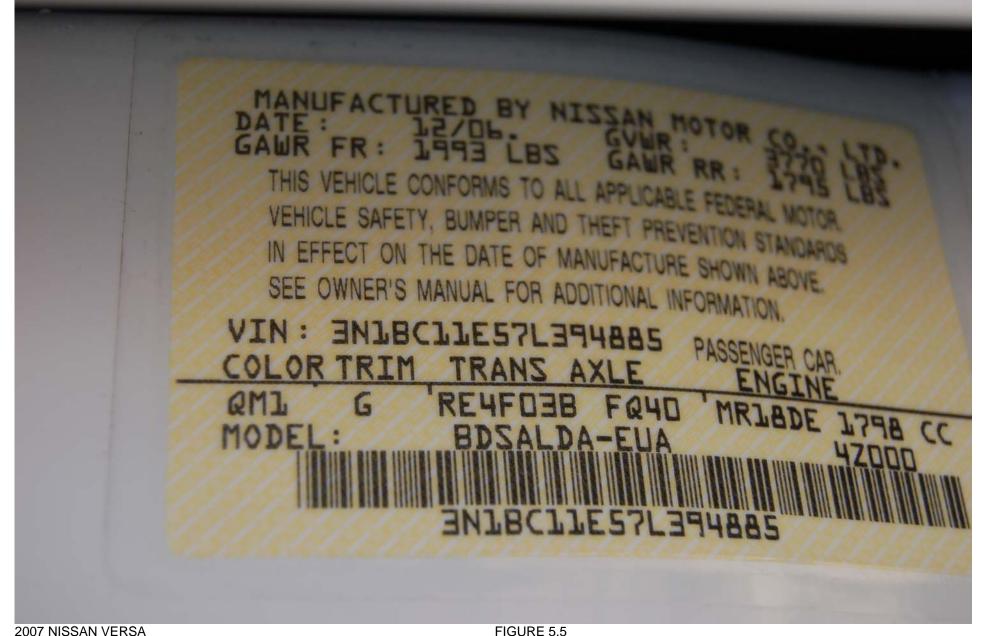


FIGURE 5.5 VEHICLE CERTIFICATION LABEL

	TIRE AND LOA PNEU ET INFORM	ATION DE	CHARGEME	NT	TIRE PNEU	ORIGINAL SIZE TAILLE ORIGINAL	COLD TIRE PRESSU PRESSION DES PNEUS F
	SEATING CAPACITY NOMBRE DE PLACES	TOTAL	AVANT	2	FRONT	P185/65R15 86H	230kPa, 33F
The combin			REAR ARRIÈRE	3	REAR ARRIÈRE	P185/65R15 86H	230kPa, 33P
and cal	ed weight of occupan rgo should never exce	ed 390 kg	g or 860 lbs.		SPARE DE SECOURS	T125/70D15	420kPa, 60P
jamais	nbiné d'occupants et excéder 390 kg ou 86	de cargai O Ibs.	son ne devra	ait	POUR D'A	E OWNER'S MANUAL FOR ADD UTRES DÉTAILS, SE REPORTER	ITIONAL INFORMATION. AU MANUEL DU CONDUCT
							EN

NHTSA NO. C75201 FMVSS NO. 103

VEHICLE TIRE INFORMATION LABEL



FIGURE 5.7 CLOSE-UP VIEW OF DEFROSTER CONTROL SETTING ON DASH



FIGURE 5.8 INSTRUMENTATION SET-UP



WINDSHIELD, PRE-TEST FROSTED STATE TEST #1



FIGURE 5.10 DEFROSTED AREA AT 20 MINUTES TEST #1





FIGURE 5.11 DEFROSTED AREA AT 25 MINUTES TEST #1

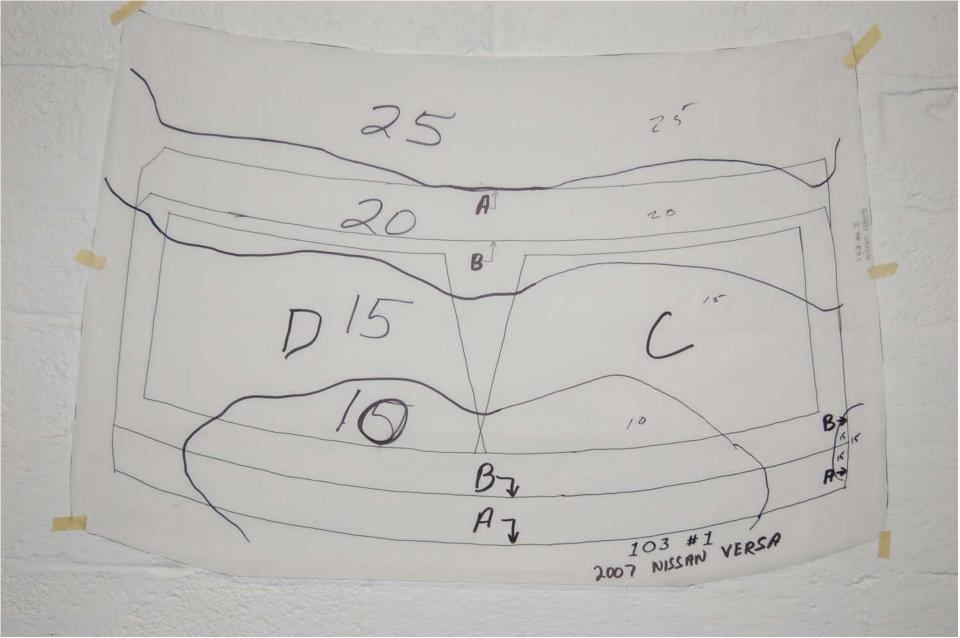


FIGURE 5.12 WINDSHIELD VELLUM PATTERN, POST TEST #1



FIGURE 5.13 WINDSHIELD PRE-TEST FROSTED STATE TEST #2







FIGURE 5.15 DEFROSTED AREA AT 25 MINUTES TEST #2


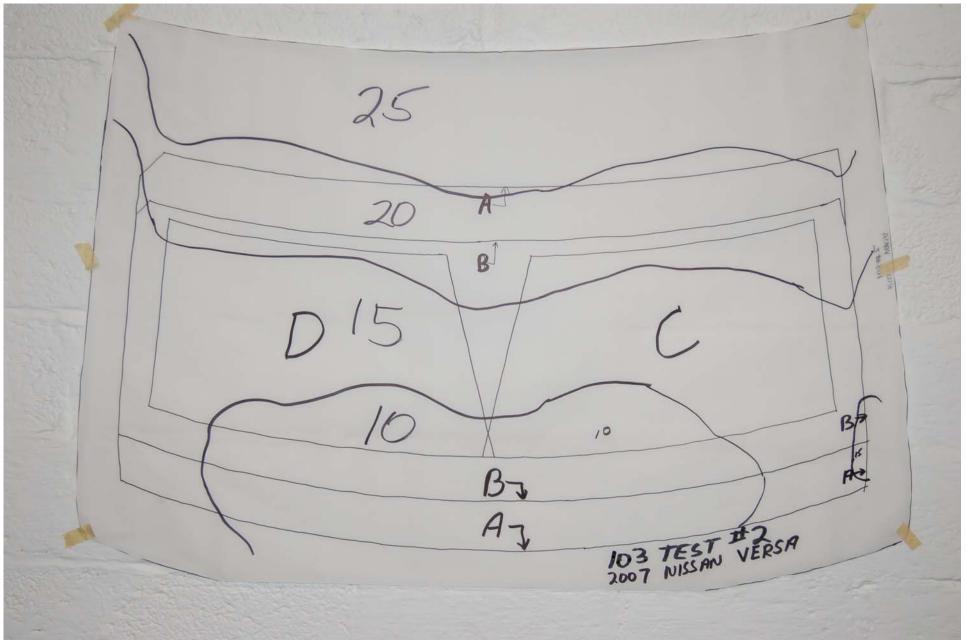


FIGURE 5.16 WINDSHIELD VELLUM PATTERN, POST TEST #2

### **SECTION 6**

### OWNER'S MANUAL DEFROSTER INSTRUCTIONS

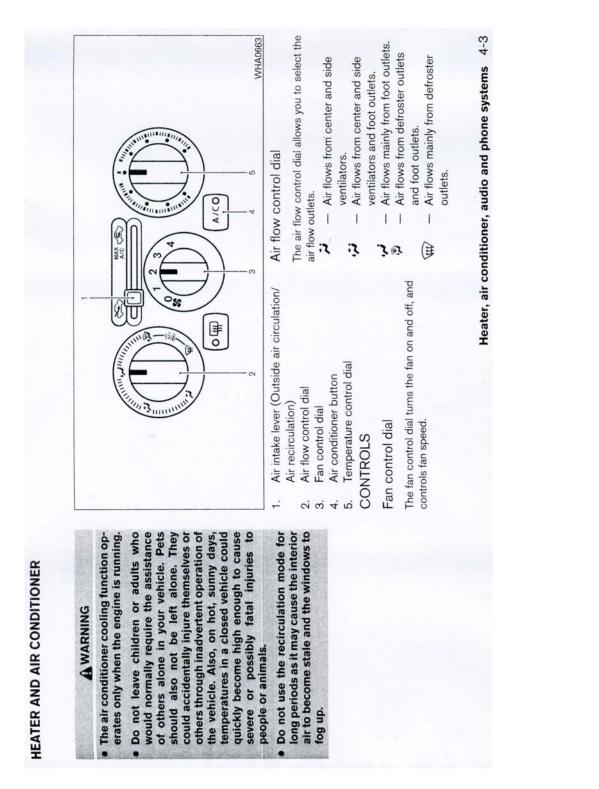

w defroster switch 2. 1 w defroster switch 2. 1 hation about the rear window defroster histruments and controls" section 4. 1 PERATION 666 air also flows from the defrost 4. 1 air intake lever to the $\bigotimes$ posi- ormal heating. 2. 1 air flow control dial to the $\checkmark$ 3. an control dial to the defrost 4. temperature control dial to the $\checkmark$ 3. an control dial to the defrest 6. an control dial to the defrest 6. but 6.	w de- froster 3. froster 3. de frost defrost defrost de and the 4. de and the 4.	The air conditioner cooling function oper-	1. Move the air intake lever to the 🏵 posi-
w defroster switch 2. 1 ation about the rear window defroster hastruments and controls" section 4. 1 hastruments and controls" section 4. 1 A. 1 A. 1 PERATION Defr air also flows from the defrost 4. 1 air intake lever to the ∞ posi- ormal heating. 2. 1 air flow control dial to the 4. 3. 3. air flow control dial to the 4. 4. 4. 1 temperature control dial to the 4. 4. 4. 1 an control dial to the desired posi- temperature control dial to the 4. 4. 4. 1 temperature control dial to the 4. 4. 4. 1 termperature control dial to the 4. 4. 1 termperature control dial to the 4. 4. 4. 1 an control dial to the desired posi- termperature control dial to the 4. 4. 4. 1 termperature control dial to the 4. 4. 4. 4. 4. 100. 100. 100. 100. 100.	w defroster switch 2. 1 nation about the rear window defroster "instruments and controls" section 4. 1 histuments and controls" section 4. 1 PERATION Defr air also flows from the defrost 1. 1 air intake lever to the ∞ posi- ormal heating. 2. 1 air flow control dial to the ∞ 3. 3. an control dial to the desired posi- temperature control dial to the de- ition between the middle and the on.	ates only when the engine is turning.	
<ul> <li>mation about the rear window defroster</li> <li>see "Rear window defroster</li> <li>instruments and controls" section</li> <li>PERATION</li> <li>PERATION</li> <li>Performation</li> <li>air also flows from the defrost</li> <li>air also flows from the defrost</li> <li>air intake lever to the position are also flow control dial to the bosition</li> <li>air flow control dial to the bosition</li> <li>bosition between the middle and the bosition</li> <li>bosition</li> </ul>	artion about the rear window defroster are are window defroster are "Rear window defroster are section PERATION PERATION PERATION are also flows from the defrost are intake lever to the ∞ posi- are flow control dial to the ∞ are flow control dial to the ∞ are flow control dial to the ∞ are control dial to the ∞ are control dial to the de- are ition between the middle and the on.	Rear window defroster switch	Turn the air flow control dial to the position.
<ul> <li>PERATION</li> <li>Performance</li> <li>Performance</li> <li>Beformation</li> <li>Bef</li></ul>	<ul> <li>PERATION</li> <li>PERATION</li> <li>Defrest seed to direct heated air to the foot defrost air also flows from the defrost.</li> <li>1. It air intake lever to the position in the air flow control dial to the position.</li> <li>2. an control dial to the position between the middle and the entition between the middle and the on.</li> <li>4. temperature control dial to the definition between the middle and the on.</li> <li>6. temperature control dial to the side and the on.</li> </ul>	For more information about the rear window de- froster switch, see "Rear window defroster switch" in the "Instruments and controls" section	
PERATION Defr sed to direct heated air to the foot air also flows from the defrost This are air intake lever to the posi- ormal heating. 2. 1. 1 1. 1 air flow control dial to the bosi- air flow control dial to the bosi- air flow control dial to the bosi- are control dial to the bosi- an control dial to the de- ition between the middle and the on.	PERATION Defr sed to direct heated air to the foot air also flows from the defrost This tar air intake lever to the Defr posi- ormal heating. 2. 1. 1 air flow control dial to the Defr defro air flow control dial to the defrost to the de- air flow control dial to the defrost to the defro ar control dial to the defrost to the defrost to the defrost. 4.	of this manual.	
Defrest best of the foot arrive arrive arrive arrive flows from the defrost arrive are also flows from the defrost arrive arrive to the the position heating. 2. 2. 3. 3. 3. 3. 3. 3. 3. 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 4. 4.	Defrest best of direct heated air to the foot This is also flows from the defrost defroit air intake lever to the the positional heating. air flow control dial to the the the side position between the middle and the on. temperature control dial to the definition between the middle and the on.	HEATER OPERATION	sired position.
sed to direct heated air to the foot defrost air also flows from the defrost defro air intake lever to the $\bigotimes$ posi- ormal heating. air flow control dial to the $\checkmark$ 3. an control dial to the desired posi- temperature control dial to the de- ition between the middle and the on.	sed to direct heated air to the foot air also flows from the defrost ari intake lever to the $\bigcirc$ posi- ormal heating. air flow control dial to the $\checkmark$ 3. an control dial to the desired posi- temperature control dial to the de- eition between the middle and the on.	Heating	Defrosting or defogging
<ol> <li>air intake lever to the Sposi- ormal heating.</li> <li>air flow control dial to the Sposi-</li> <li>an control dial to the desired posi-</li> <li>temperature control dial to the de- ition between the middle and the</li> <li>on.</li> </ol>	air intake lever to the $\bigotimes$ posi- ormal heating. 2. air flow control dial to the $\checkmark$ 3. an control dial to the desired posi- temperature control dial to the de- ition between the middle and the on.	This mode is used to direct heated air to the foot	This mode directs the air to the defrost outlets to defrost/defog the windows.
air intake lever to the $\leftarrow$ posi- ormal heating. 2. air flow control dial to the $\checkmark$ 3. an control dial to the desired posi- temperature control dial to the de- ation between the middle and the on.	air intake lever to the $\leftarrow$ posi- ormal heating. 2. air flow control dial to the $\checkmark$ 3. an control dial to the desired posi- temperature control dial to the de- ition between the middle and the on.	outlets.	
air flow control dial to the <b>*</b> 3. an control dial to the desired posi- temperature control dial to the de- ation between the middle and the on.	air flow control dial to the <b>*</b> 3. an control dial to the desired posi- temperature control dial to the de- ition between the middle and the on.	Move the air intake lever to the 🏵	tion.
air flow control dial to the ** 3. an control dial to the desired posi- temperature control dial to the de- sition between the middle and the on.	air flow control dial to the <b>*</b> 3. an control dial to the desired posi- temperature control dial to the de- atition between the middle and the on.	tion for normal heating.	
<ul> <li>an control dial to the desired posi- temperature control dial to the de- ition between the middle and the on.</li> <li>rects outside air to the side and tors.</li> </ul>	an control dial to the desired posi- temperature control dial to the de- sition between the middle and the on.	Turn the air flow control dial to the	position.
an control dial to the desired posi- temperature control dial to the de- ation between the middle and the on.	an control dial to the desired posi- temperature control dial to the de- sition between the middle and the on.		
4. temperature control dial to the de- sition between the middle and the on.	4. temperature control dial to the de- sition between the middle and the on. rects outside air to the side and tors.		tion.
temperature control dial to the de- sition between the middle and the on. rects outside air to the side and tors.	emperature control dial to the de- atition between the middle and the on. rects outside air to the side and tors.		
on. rects outside air to the side and tors.	on. rects outside air to the side and tors.		sired position between the middle and the hot position.
rects outside air to the side and tors.	rects outside air to the side and tors.	hot position.	• To quickly remove ice or fog from the win-
rects outside air to the side and tors.	rects outside air to the side and tors.	Ventilation	dows, turn the fan control dial to the maximum position and the temperature control
none systems	ione systems	This mode directs outside air to the side and center ventilators.	dial to the full HOT position.
		none systems	

## Temperature control dial

temperature, turn the dial to the left. To increase the temperature, turn the dial to the right. The temperature control dial allows you to adjust the temperature of the outlet air. To lower the

### Fresh air

position. The air flow is drawn from outside the vehicle. Move the air intake lever to the 🏵

## Air recirculation

Move the air intake lever to the CC position to recirculate air inside the vehicle.

Use the C selection:

when driving on a dusty road.

- to prevent traffic fumes from entering passenger compartment.
- for maximum cooling when using the air conditioner.

Air conditioner button A/C Start the engine, turn the fan control dial to the turn on the air conditioner. The indicator light comes on when the air conditioner is operating. To turn off the air conditioner, push the  $^{\rm A/C}$ desired position and push the A/C button to button again.

# 4-4 Heater, air conditioner, audio and phone systems

Cooling	This mode is used to cool and dehumidify the air. 1. Move the air intake lever to the $\bigotimes$ posi-	2. Turn the air flow control dial to the 🕇	<ol> <li>Turn the fan control dial to the desired position.</li> <li>Push the <sup>A/C</sup> button. The indicator light comes on.</li> </ol>	5. Turn the temperature control dial to the de- sired position.	• For quick cooling when the outside tem- perature is high, move air intake lever to the CD position. Be sure to return to the CD position for normal cooling.	Dehumidified heating	This mode is used to heat and dehumidify the air. 1. Move the air intake lever to the Solution.	2. Turn the air flow control dial to the vi position.	3. Turn the fan control dial to the desired posi- tion.	Heater, air conditioner, audio and phone systems 4-5
2. Turn the air flow control dial to the 😵 position.	3. Turn the fan control dial to the desired posi- tion.	<ol> <li>Turn the temperature control dial to the de- sired position between the middle and the hot position.</li> </ol>	When the W position is selected, A/C will be automatically turned on (but the indicator light will remain off). This will dehumidify the air and help to defog the windows. When the air flow control dial	is criariged to a dirierent position, the A/C will be turned off.	Clear snow and ice from the wiper blades and air inlet in front of the windshield. This improves heater operation.	AIR CONDITIONER OPERATION	Start the engine, turn the fan control dial to the desired position, and push the A/C button to activate the air conditioner. When the air conditioner to be activate the air conditioner when the desired position and down activity of the desired position and down activity of the desired position activity of the desired positivity	are added to the heater operation.	The air conditioner cooling function oper- ates only when the engine is running.	Heater, air co

automatically turned on (but the indicator light will remain off). This will dehumidify the air and help to is changed to a different position, the A/C will be defog the windows. When the air flow control dial

position is selected, A/C will be

When the W

### **Bi-level heating**

turned off.

This mode directs cooler air from the side and center vents and warmer air from the floor outlets. When the temperature control dial is moved to the full hot or full cool position, the air between the vents and the floor outlets is the same temperature.

- 1. Move the air intake lever to 🏵 position.
- 2. Turn the air flow control dial to the 😼 position.
- 3. Turn the fan control dial to the desired position.
- 4. Turn the temperature control dial to the desired position.

## Heating and defogging

This mode heats the interior and defogs the windshield.

-isod 1. Move the air intake lever to the 🏵 tion.